



BXST

BX-V099-D


Simple Installation Only 3 Steps

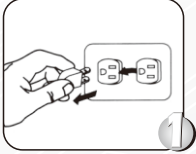

Disconnect the power outlet and protect the equipment.

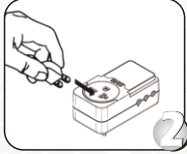

Insert device into BXST protector

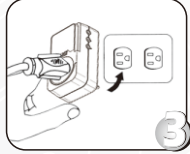

Within 2 seconds, the protector will display the low voltage, and then start waiting for the announcement time such as the periodic indication. After 30 seconds, the normal voltage indicator will be turned on and the device will be activated to protect.

⚠️ ADVERTENCIA

REVISE SU ENCHUFE Y TOMACORRIENTE.

Si están flojos o en mal estado se produce una mala conexión y pueden dañar el protector y el equipo a proteger.

RIESGO DE CHOQUE ELÉCTRICO.

de cualquier reparación o mantenimiento por parte de personal técnico calificado, se debe desenchufar el protector y el equipo.

PARA SU SEGURIDAD

y efectos de la Garantía, no exceda la capacidad máxima.

NO SE RECOMIENDA PARA ARTEFACTOS DE REFRIGERACIÓN

(Neveras, Congeladores, Aires Acondicionados). En tal caso consulte por los modelos V099-D

Function description of BX-V099-D:

- 1: Operating voltage:** 120VAC.
- 2: Delay time:** 005 seconds - 999 seconds can be set; (every second for an increase or decrease in gear. long press keys can be continuously increased or decreased. In the process of delay, the countdown display can also be operated and the quick start button can be quickly output).
- 3: Under-voltage protection range:** 80V-100V can be set, (Each V is an increase or decrease gear, long press button can continuously increase or decrease, after under-voltage protection: actual voltage and LOP alternate display).
- 4: Overvoltage protection range:** 130V-150V can be set, (Every V for an increase or decrease gear, long press button can be continuously increased or decreased, after overvoltage protection: actual voltage and HIV alternate display).
- 5: Frequency range:** 50-60HZ.
- 6: Warranty period:** 730days (countdown, long press the view key for 3 seconds to display the warranty period, such as: 730 and DAY alternate display).

Functional settings:

Press the settings key for 2 seconds to enter the settings state

Enter High Voltage Settings

H flicker, when the operation increases or decreases the buttons to set (setting range 130V-150V), after setting, press the button once more to enter the next setting or automatically exit after 3 seconds.

Enter Low Voltage Settings

L flicker, when the operation increases or decreases the buttons to set (set range 80V-100V), after setting is completed, press the button once again to enter the next setting or automatically exit after 3 seconds.

Enter Delay Settings

S flicker, when the operation increases or decreases keys to set (setting range 005-999)

BXST

PROTECTOR DE VOLTAJE

120VAC Para equipos domésticos electrónicos BX-V099-D



5-999s



I Max=15A



80V~100VAC



130V~150VAC



120VAC/50Hz

Direct wired equipment



Whole office

2 Warranty years

Large fridge / freezers



Air conditioners



BX-V099-D



6910578011019